

## A

A-Arm Replacement, 5.14  
 A-Arm Replacement, Mid Axle (6x6), 5.15  
 Air Filter/Breather Service, (RANGER 2X,4X,6X),  
 2.24  
 Air Filter/Breather Service, (RANGER TM), 2.23  
 Air Intake Inspection, 2.26  
 Alternator Output Test, 10.6, 10.19

## B

Battery Charging, 10.31, 10.32, 10.34  
 Battery Check Before Install, 10.31  
 Battery Installation, 10.29, 10.33  
 Battery Maintenance, 2.18, 10.31  
 Battery Service, 10.28, 10.29, 10.30, 10.33, 10.34  
 Battery Terminal Bolts, 10.29  
 Battery Testing, 10.29, 10.33  
 Battery, Off Season Storage, 10.30, 10.34  
 Bearing Removal/Installation, Rear Axle, 7.46  
 Body Molding Exploded View , 5.8  
 Body/Panel Removal , 5.3  
 Box Removal / Installation, 5.21  
 Brake Bleeding, 9.6  
 Brake Caliper Assembly, Front, 9.14  
 Brake Caliper Assembly, Rear, 9.20  
 Brake Caliper Disassembly, Front, 9.13  
 Brake Caliper Disassembly/Inspection, Rear, 9.19  
 Brake Caliper Exploded View, Front, 9.15  
 Brake Caliper Exploded View, Rear, 9.23  
 Brake Caliper Inspection, Front, 9.14  
 Brake Caliper Installation, Front, 9.16  
 Brake Caliper Removal, Front, 9.13  
 Brake Caliper Removal, Rear, 9.18  
 Brake Disc Inspection, 9.12  
 Brake Disc Inspection, Rear, 9.23  
 Brake Disc Removal / Replacement, Front, 9.12  
 Brake Disc Removal, Front, 9.12  
 Brake Fluid Change, 9.6

Brake Fluid Level, 2.36  
 Brake Front Pad Replacement, 9.10, 9.11  
 Brake Hose/Fitting Inspection, 2.36  
 Brake Light Switch Testing, 10.36  
 Brake Noise, 9.3  
 Brake Pad Adjustment, Front, 9.11  
 Brake Pad Inspection, 2.36  
 Brake Pad Installation, Rear, 9.17  
 Brake Pad Removal, Rear, 9.16  
 Brake System Inspection, 2.36  
 Brake System Operation, 9.4  
 Brake System Service Notes, 9.3  
 Brake System, Exploded View, 9.5  
 Brakelight Lamp Replacement, 10.35  
 Breather Filter Maintenance, (RANGER  
 2X,4X,6X), 2.24  
 Breather Hose Inspection, 2.25  
 Breather Hose Inspection, (RANGER TM), 2.24

## C

Cab Frame & Seat Exploded View, (RANGER  
 2X,4X,6X), 5.4  
 Cab Frame & Seat Exploded View, (RANGER  
 TM), 5.5  
 Cam Chain Drive Sprocket Installation, 3.87  
 Cam Chain Tensioner Inspection, 3.59  
 Cam Chain Tensioner Installation, 3.93  
 Cam Chain Tensioner Removal, 3.58  
 Cam Chain/Camshaft Installation, 3.90  
 Cam Chain/Tensioner Blade, 3.76  
 Camber & Caster, 2.34  
 Camshaft Inspection, 3.62  
 Camshaft Removal, 3.60  
 Camshaft Timing, 3.90, 3.92  
 Carburetor Assembly, 4.9, 4.23  
 Carburetor Disassembly, 4.8, 4.21  
 Carburetor Exploded View, 4.3  
 Carburetor Exploded View, BST34, 4.14  
 Carburetor Float Bowl Draining, (RANGER  
 2X,4X,6X), 2.17

Carburetor Float Bowl Draining, (RANGER TM), 2.17  
 Carburetor Float Height Adjustment, 4.9, 4.23  
 Carburetor Float System, 4.19  
 Carburetor Fuel Level Testing, 4.9, 4.24  
 Carburetor Idle Speed Adjustment, RANGER TM, 2.15  
 Carburetor Inspection, 4.9, 4.22, 4.23  
 Carburetor Main System, 4.19  
 Carburetor Needle and Seat Testing, 4.24  
 Carburetor Operation, 4.6, 4.17  
 Carburetor Pilot System, 4.18, 4.20  
 Carburetor Removal, 4.7, 4.21  
 Carburetor Starter System, 4.18  
 Carburetor System Function, 4.17  
 Cargo Box Exploded View, 5.10  
 CDI Output Test, 10.18  
 Charging System Break Even Test, 10.5, 10.19  
 Charging System Testing, 10.7, 10.20  
 Choke Adjustment, 2.14  
 Clutch Alignment, 6.17, 6.38  
 Clutch Offset, 6.18, 6.39  
 Cold Weather Kits, 1.14  
 Combustion Chamber, 3.67  
 Compression Release Removal/Inspection, 3.61, 3.62  
 Coolant Level Inspection, 2.20  
 Coolant Strength, 2.20  
 Coolant Temperature Sensor, 10.13  
 Cooling System Hoses, 2.21  
 Cooling System Overview, 2.20  
 Cooling System Pressure Test, 3.50  
 Cooling System Test, 2.22  
 Counter Balancer Installation, 3.85  
 Counter Balancer Shaft End Play, 3.84  
 Counter Balancer Shaft Removal/Inspection, 3.79  
 Crankcase Assembly, 3.85  
 Crankcase Bearing Inspection, 3.81  
 Crankcase Bearing Installation, 3.82  
 Crankcase Disassembly, 3.75

Crankcase Inspection, 3.81  
 Crankcase Installation, 3.85  
 Crankcase Separation, 3.77  
 Cranking Output Test, 10.18  
 Crankshaft End Play Adjustment, 3.82  
 Crankshaft Removal/Inspection, 3.80  
 Crankshaft Straightening, 3.5, 3.53  
 Current Draw, 10.5, 10.18  
 CV Joint Handling Tips, 7.10  
 Cylinder Cleaning, 3.4, 3.53  
 Cylinder Head Assembly, 3.70  
 Cylinder Head Disassembly, 3.65  
 Cylinder Head Inspection, 3.65  
 Cylinder Head Installation, 3.90  
 Cylinder Head Reconditioning, 3.67  
 Cylinder Head Removal, 3.63, 3.64  
 Cylinder Head Warpage, 3.65  
 Cylinder Honing, 3.4, 3.52  
 Cylinder Inspection, 3.73  
 Cylinder Installation, 3.89  
 Cylinder Removal/Inspection, 3.71

## D

Dash Instruments and Controls, 5.11  
 Decal Replacement, 5.22  
 Decimal Equivalents, 1.15  
 Differential Lock Lever Removal/Installation, (TM, 2x4, & 4x4), 7.60  
 Drive Belt Removal/Inspection, 6.16, 6.37  
 Drive Belt Tension, 6.15, 6.36  
 Drive Clutch Assembly, 6.35  
 Drive Clutch Assembly, (RANGER TM), 6.14  
 Drive Clutch Bushing Service, 6.39, 6.40, 6.41  
 Drive Clutch Disassembly, 6.12, 6.33, 6.34, 6.35  
 Drive Clutch Disassembly, (RANGER TM), 6.11  
 Drive Clutch Exploded View, 6.30  
 Drive Clutch Exploded View, (RANGER TM), 6.9  
 Drive Clutch Inspection, 6.10, 6.11, 6.33  
 Drive Clutch Operation, 6.2

Drive Shaft Boot Replacement, 7.11  
 Driven Clutch Assembly, 6.20, 6.43  
 Driven Clutch Bushing Service, 6.44, 6.45  
 Driven Clutch Disassembly, 6.19, 6.42  
 Driven Clutch Operation, 6.2

## E

Electric Box Lift , 10.38  
 Electrical Components Identification, 10.12  
 Electrical Service Notes, 10.3, 10.12  
 Electrical Special tools, 10.3, 10.12  
 Engine Components, 3.7  
 Engine Accessible Components, 3.51  
 Engine Assembly, 3.30, 3.31, 3.32, 3.33, 3.34, 3.35, 3.36, 3.37, 3.38, 3.39, 3.40, 3.41, 3.81, 3.82, 3.84, 3.85, 3.86, 3.87, 3.88, 3.89, 3.90, 3.92, 3.93, 3.94  
 Engine Assembly Notes, 3.24  
 Engine Assembly, Main Bear Cover & Oil Pump , 3.36  
 Engine Assembly, Air Cleaner Assembly, 3.41  
 Engine Assembly, Crankshaft & Governor Gear, 3.33  
 Engine Assembly, Cylinder Head, 3.31  
 Engine Assembly, Cylinder Head , 3.37  
 Engine Assembly, Electrical Components, 3.38  
 Engine Assembly, Governor Adjustment, 3.40  
 Engine Assembly, Governor, Throttle, Choke Levers, 3.39, 3.40  
 Engine Assembly, Piston & Connecting Rod, 3.32, 3.34  
 Engine Assembly, Tappets & Camshafts, 3.35  
 Engine Bottom End Disassembly, 3.71, 3.72, 3.73, 3.74, 3.75, 3.76, 3.77, 3.78, 3.79, 3.80, 3.81  
 Engine Break in Period, 3.42, 3.52  
 Engine Component Spec Table, 3.24  
 Engine Designation, 1.2  
 Engine Disassembly, 3.12, 3.14, 3.15, 3.16, 3.17, 3.18, 3.19, 3.20, 3.21, 3.22, 3.23  
 Engine Exploded View, 3.57  
 Engine Fastener Torque Patterns, 3.49  
 Engine Installation Notes, 3.42, 3.52  
 Engine Lubrication, 3.54  
 Engine Removal, 3.51  
 Engine Serial Number Location, 1.2  
 Engine Service Data, 3.24, 3.25, 3.26, 3.27, 3.28, 3.29, 3.47, 3.48  
 Engine to Frame Ground, 2.19  
 Engine Top End Disassembly, 3.58, 3.59, 3.60, 3.61, 3.62, 3.63, 3.64, 3.65, 3.66  
 Engine Torque Specs, 3.3  
 Exhaust System, Maintenance, 2.35  
 Exhaust Valve Adjustment, 3.71  
 Exhaust Valve Adjustment, RANGER 2X,4X,6X, 2.33

## F

Fan Control Circuit Testing, 10.14  
 Fan Control Switch Bypass Test, 10.14  
 Fan Control Switch Testing, 10.14  
 Fan Motor Current Draw Test, 10.14  
 Flywheel Housing, (RANGER 2X,4X,6X), 2.25  
 ECM (Logic Box) Operation, 10.4  
 Flywheel Identification, 10.15  
 Flywheel Installation, 3.93  
 Flywheel Removal/Inspection, 3.76  
 Frame, Nuts, Bolts, Fasteners, 2.37  
 Frame/Body Exploded View, (RANGER 2x,4x,6x), 5.6  
 Frame/Body Exploded View, (RANGER TM), 5.7  
 Front Brake Pedal Removal / Install, 9.5  
 Front Drive Axle Installation, (4x4 & 6x6), 7.10  
 Front Drive Axle Removal, (4x4 & 6x6), 7.9  
 Front Hub Bearing Replacement, (4x4 & 6x6), 7.7  
 Front Hub Exploded View, (4x4 & 6x6), 7.8  
 Front Hub Exploded View, (TM & 2x4), 7.5  
 Front Hub Installation, (4x4 & 6x6), 7.6  
 Front Hub Installation, (TM & 2x4), 7.3  
 Front Hub Removal/Inspection, (4x4 & 6x6), 7.5  
 Front Hub Removal/Inspection, (TM & 2x4), 7.2  
 Front Prop Shaft Removal, (4x4 & 6x6), 7.12  
 Front Strut Assembly, 5.18

Front Strut Ball Joint Replacement, 5.19  
Front Strut Cartridge Replacement, 5.19  
Fuel Filter Maintenance, 2.16  
Fuel Line Maintenance, 2.16  
Fuel Pump Assembly, 4.10  
Fuel Pump Disassembly, 4.10  
Fuel Pump Removal/Installation, 4.10, 4.24  
Fuel Tank Assembly, Exploded View, 4.4, 4.15  
Fuel Tank Removal/Installation, 4.11, 4.25

## G

Gear Indicator Light Testing, 10.36  
Gearcase Assembly/Inspection (4x4 & 6x6),  
Front, 7.19  
Gearcase Coil Resistance, Front, 7.16  
Gearcase Disassembly (4x4 & 6x6), Front, 7.16  
Gearcase (4X4) Diagnosis, Front, 7.22  
Gearcase Exploded View, Front, 7.24  
Gearcase Installation (4x4 & 6x6), Front, 7.22  
Gearcase Lubrication, Front, 2.9  
Gearcase Lubrication, Middle, 2.9  
Gearcase Lubrication, Rear, 2.10  
Gearcase Operation (4X4 & 6x6), Front, 7.15  
Gearcase Removal (4x4 & 6x6), Front, 7.16  
Glossary of Terms, 1.16

## H

Headlamp Service, 10.35  
Headlamp Switch Testing, 10.36  
Headlight Adjustment, 10.35  
Honing to Oversize, 3.4, 3.53  
Hood Exploded View , 5.9

## I

Identification Numbers, 1.2  
Idle Speed Adjustment, (RANGER 2X,4X,6X),  
2.16

Ignition System Components, (ATP 500), 10.16  
Ignition System Testing, 10.17  
Ignition Timing Curve, 10.13  
Indicator Lamp Replacement, 10.37  
Intake Valve Adjustment, (RANGER 2X,4X,6X),  
2.33

## J

Jetting Guidelines, 4.5, 4.16

## K

Keys, Replacement; 1.3

## L

Load Test, 10.30, 10.33  
Lubricants, 2.4  
Lubrication Chart, 2.7, 2.8  
Lubrication Charts, 2.6

## M

Machine Dimensions, 1.4, 1.5, 1.6  
Maintenance Chart, Periodic, 2.2  
Mid Drive Bearing Carrier/Hub Assembly, (6x6),  
7.28  
Mid Drive Bearing Carrier/Hub Disassembly (6x6),  
7.27  
Mid Drive Bearing Carrier/Hub Removal, (6x6),  
7.25  
Mid Drive Gearcase Assembly, (6x6), 7.37  
Mid Drive Gearcase Disassembly, (6x6), 7.34  
Mid Drive Gearcase Exploded View, 7.42  
Mid Drive Gearcase Installation, (6x6), 7.41  
Mid Drive Gearcase Removal, 7.33  
Mid Drive Hub Exploded View, (6x6), 7.29  
Mid Drive Shaft Disassembly/Assembly, (6x6),  
7.32  
Mid Drive Shaft Installation, (6x6), 7.30  
Mid Drive Shaft Removal, (6x6), 7.29  
Middle Hub Installation, (6x6), 7.26

Model & Serial Number Location, 1.3

Model Identification, 1.2

## O

Oil Check , Engine, (RANGER 2X,4X,6X), 2.29

Oil Check , Engine, (RANGER TM), 2.27

Oil Filter Change, (RANGER 2X,4X,6X), 2.30

Oil Filter Change, (RANGER TM), 2.27

Oil Flow, 3.6, 3.55, 3.56

Oil Pipes, 3.95

Oil Pressure Test, 3.54

Oil Pump Assembly, 3.79

Oil Pump Installation, 3.85

Oil Pump Priming, 3.54

Oil Pump Priming, (RANGER 2X,4X,6X), 2.31

Oil Pump Removal/Inspection, 3.78

Oil Pump Shaft End Play, 3.84

One Way Valve, 3.77

One Way Valve Installation, 3.87

## P

Paint Codes, 1.13

Parking Brake Adjustment, 9.7

Parking Brake Lock, Exploded View, 9.9

Parking Brake/Brake Line, Inspection, 9.7

Pilot Screw Adjustment, 2.15

Piston Identification, 3.49

Piston Installation, 3.88

Piston Removal, 3.72

Piston Ring Installation, 3.88

Piston Ring Installed Gap, 3.75

Piston to Cylinder Clearance, 3.74

Piston/Rod Inspection, 3.74

Pre-Ride Inspection, 2.5

Predator Specifications, 1.7, 1.8

Publication Numbers, 1.13

Pump Shaft Oil Seal Installation, 3.85

PVT Assembly, (RANGER 2x,4x,6x), 6.27

PVT Assembly, (RANGER TM), 6.6

PVT Disassembly, (RANGER 2x,4x,6x), 6.26

PVT Disassembly, (RANGER TM), 6.5

PVT Maintenance, 6.2

PVT Operation, 6.2

PVT Overheating, 6.3

PVT System Sealing/Ducting Components, 6.8,  
6.29

PVT Troubleshooting, 6.22, 6.23, 6.47, 6.48

## R

Radiator Cap Pressure Test, 3.50

Radiator Coolant Drain, Radiator Removal, 2.22

Radiator Coolant Level Inspection, 2.21

Radiator, Maintenance, 2.22

Rear Differential Operation, (TM, 2x4, & 4x4),  
7.56

Rear Axle Bearing Removal/Installation, 7.49

Rear Axle Tube Removal, 7.45

Rear Differential Exploded View, (TM, 2x4, &  
4x4), 7.55

Rear Differential Linkage Inspection/Adjustment,  
(TM, 2x4, & 4x4), 7.58

Rear Differential Actuator Removal, 2x4 & 4x4,  
7.51

Rear Differential Assembly, (2x4 & 4x4), 7.51

Rear Differential Disassembly, (2x4 & 4x4), 7.49

Rear Differential Disassembly, (6x6), 7.60

Rear Differential Exploded View, (6x6), 7.65

Rear Differential Installation, 7.46, 7.54

Rear Differential Installation, (6x6), 7.64

Rear Differential Removal/Inspection, 7.43

Rear Drive Axle and Swing Arm, Exploded View,  
5.16

Rear Gearcase Assembly, (6x6), 7.62

Rear Gearcase Removal, 7.49

Rear Hub Inspection, 7.43

Recoil Assembly, 3.96

Recoil Disassembly/Inspection, 3.95

Rocker Arm/Shaft Inspection, 3.59, 3.60

Rocker Shaft/Arm Assembly Installation, 3.94

## S

Seatback Screen Removal, RANGER TM, 5.20  
 Shift Lever Removal/Installation, (2x,4x,6x), 8.22  
 Shift Lever Removal/Installation, (TM), 8.3  
 Shift Linkage Inspection/Adjustment, 2.12  
 Shift Linkage Inspection/Adjustment, (2x,4x,6x), 8.22  
 Shift Linkage Inspection/Adjustment, (TM), 8.3  
 Shift Weights, (RANGER 2x,4x,6x), 6.32  
 Shift Weights, (RANGER TM), 6.10  
 Spark Plug Maintenance, 2.19  
 Special Tools, 2.5, 3.3, 3.46, 4.5, 4.16, 7.2, 9.2  
 Special Tools, PVT, 6.5, 6.26  
 Special Tools, Suspension, 5.2  
 Specifications, 1.9, 1.10, 1.11, 1.12  
 Specifications, Brake, 9.2  
 Specifications, Cooling System, 3.51  
 Specifications, Drive Clutch Spring, (RANGER TM), 6.10  
 Specifications, Drive Clutch Spring, (RANGER 2x,4x,6x), 6.31  
 Specifications, Torque, Brakes, 9.2  
 Specifications, Torque, Engine, 3.46  
 Specifications, Torque, Final Drive, 7.2  
 Specifications, Torque, PVT, 6.5, 6.26  
 Specifications, Torque, Standard, 1.14  
 Specifications, Torque, Steering, 5.2  
 Specifications, Torque, Suspension, 5.2  
 Specifications, Torque, Transmission, (2X,4X,6X), 8.22  
 Specifications, Torque, Transmission, (RANGER TM), 8.3  
 Spider Removal, 6.12, 6.34  
 Starter Assembly, 10.10, 10.24  
 Starter Disassembly, 10.9, 10.21  
 Starter Drive, 10.24  
 Starter Drive Installation, 3.94  
 Starter Drive Removal/Inspection, 3.75

Starter Motor Armature Testing, 10.10, 10.23  
 Starter Motor Brush Inspection/Replacement, 10.9, 10.22  
 Starter System Test, 10.25, 10.26  
 Starting the Machine, 1.13  
 Stator Installation, 3.93  
 Stator Removal/Inspection, 3.76  
 Steering Assembly Exploded View, 5.12  
 Steering Maintenance, 2.33  
 Steering Tie Rod / A-Arm Exploded View, 5.13  
 Suspension, Front, Inspection, 2.38  
 Suspension, Rear, Inspection, 2.38  
 Swing Arm Removal and Installation, 5.17

## T

Taillight Lamp Replacement, 10.35  
 Tap Drill Chart, 1.15  
 Tensioner Blade Installation, 3.88  
 Thermostat Installation, 3.94  
 Throttle Cable Adjustment, (RANGER 2X,4X,6X), 2.14  
 Throttle Cable Adjustment, (RANGER TM), 2.14  
 Throttle Freeplay, 2.13  
 Throttle Freeplay Adjustment, 2.13  
 Throttle Pedal Inspection, 2.13  
 Tie Rod Inspection, 2.34  
 Timing Check Procedure, 10.13  
 Tire Inspection, 2.37  
 Tire Pressure, 2.37  
 Tire Tread Depth, 2.37  
 Toe Alignment, 2.34  
 Torque Conversion Table, 1.14  
 Torque Patterns, Engine, 3.49  
 Transmission Lubrication, 2.11  
 Transmission Assembly, (2x,4x,6x), 8.34  
 Transmission Assembly, (TM), 8.12  
 Transmission Disassembly, (TM), 8.6  
 Transmission Disassembly, (2x,4x,6x), 8.27  
 Transmission Exploded View, (2x4), 8.40, 8.41  
 Transmission Exploded View, (4x4 & 6x6), 8.42, 8.43

Transmission Exploded View, (TM), 8.19, 8.20  
Transmission I.D. Location, 1.2  
Transmission Installation, (2x,4x,6x), 8.26  
Transmission Installation, (TM), 8.6  
Transmission Removal, (2x,4x,6x), 8.23  
Transmission Removal, (TM), 8.4  
Transmission Troubleshooting, 8.18, 8.39  
Troubleshooting, Brakes, 9.24  
Troubleshooting, Cooling System, 3.43, 3.98  
Troubleshooting, Engine, 3.42, 3.97  
Troubleshooting, Fuel System/Carb, 4.12, 4.25  
Troubleshooting, Ignition System, 10.5, 10.18  
Troubleshooting, Spark Plug, 3.42, 3.97  
Troubleshooting, Starter System, 10.8, 10.21

## U

U-Joint Assembly, 7.14  
U-Joint Disassembly, 7.13

## V

Valve Clearance, 2.31

Valve Clearance, (RANGER 2X,4X,6X), 2.31, 2.32  
Valve Guide Removal/Installation, 3.67  
Valve Inspection, 3.66  
Valve Seal Testing, 3.70  
Valve Seat Inspection, 3.67  
Valve Seat Reconditioning, 3.67  
Vent Line Maintenance, 2.16  
Voltage Drop Test, 10.8, 10.21  
Voltage Test Open Circuit, 10.30, 10.33

## W

Water Pump Mechanical Seal Installation, 3.86  
Water Pump Mechanical Seal Removal, 3.81  
Water Pump Mechanical Seal Removal, Engine Installed, 3.86  
Water Pump Shaft Oil Seal, 3.81  
Wheel Installation, 2.37  
Wheel Removal Front or Rear, 2.37  
Wiring Diagram, (RANGER 2x4, 4x4, 6x6), 10.41, 10.42  
Wiring Diagram, (RANGER TM), 10.39, 10.40

